 


Touchscreen Audio Player

Simple Setup

Your audio player has been shipped preloaded with music and is ready to play after setting up a few simple things.

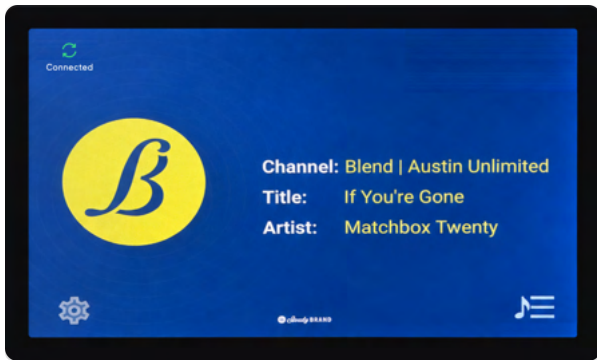

HOME SCREEN



CONNECTION PANEL

THREE CONNECTIONS

1

AUDIO

Audio Cable

A 3.5mm stereo “headphone” jack is required to connect the player to your amplifier. You can also use the included audio cable convertor to convert the 3.5 to an RCA cable if you are currently using RCA connections. Connect the audio cable to the port with the headphone symbol located next to the USB port.

2

NETWORK

Ethernet Cable

If you are using an Ethernet cable to connect to the Internet, go ahead and connect it to the player now. If you will be using Wi-Fi, then we will set that up after the unit has been powered up.

3

POWER

Power Cable


Connect the provided power cord to the port labeled DC on the player and then plug the other end into your outlet.

Up and Running

THE HOME SCREEN

The player will boot up and go thru several start up screens. In about 30 seconds it will arrive at the Home Screen and display Program, Song and Artist information.

If the unit is configured for dual audio output, you will also see a Zone selection option. The Zone name can be customized by contacting our support team. Simply touch the Zone name to change the screen display to the desired zone.

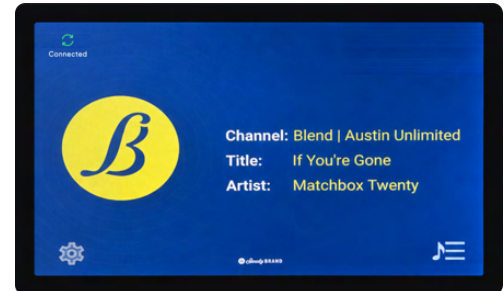

PROGRAM · SONG · ARTIST · ZONE

CHECK YOUR AUDIO

At this point, you should have music playing overhead if you have connected the audio cable to your amplifier and have the amplifier turned up. If you do not hear music overhead, you can disconnect the audio cable from the back of the player, and the speakers should be playing music. This indicates the player is operating properly, and you need to correct the amplifier settings.

STAY CONNECTED

Music & code updates

Music is streamed in real time, and the player keeps a small local cache, so playback continues through brief network outages. The player must remain connected to receive periodic code updates and ensure music plays without interruption. Refer to the network section to set up Wi-Fi and confirm Internet connectivity.

MAKE IT YOURS

Program selection

If your player has been loaded with multiple programs, you can refer to the Program Selection section to learn how to change the program and create your own unique mix.

Network Connectivity

The player can be connected to the Internet using the Ethernet port or local Wi-Fi.



WIRED

Ethernet


For Ethernet, simply connect an Ethernet cable to the port located on the back edge of the player.



WIRELESS

Wi-Fi Settings


For Wi-Fi connectivity, select the settings cog on the lower left of the Home screen. Once on the Player Info and Settings page, tap the word Configure located to the right of Wi-Fi Settings.

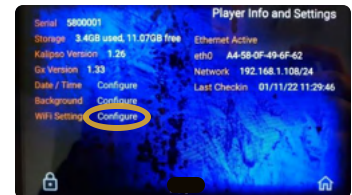

JOIN

Select a network

Select the Wi-Fi network and follow instructions to enter the password. The player will confirm when the unit is connected. Once connected you can tap the arrow to go back to the Settings page and then tap the Home icon to go back to Home screen.

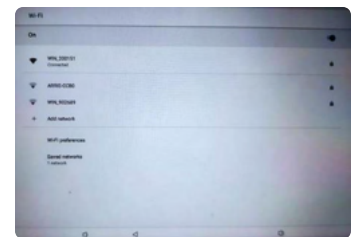

CONFIRMING CONNECTION

Connectivity status can be verified locally on the player status icon in the upper left corner. It is always advisable to have the Ethernet connected to the player and the network gear prior to powering up the player. The icon will go green when it first connects to the server.

Please note, if the player is powered up and makes an initial connection attempt prior to the Ethernet cable being connected, then the player will have to wait for the next attempt which will occur every 15 minutes. Additionally, the player can be forced to attempt a check-in by "pressing and holding" the connected status icon for a few seconds. The player will then attempt check-in regardless of the 15-minute interval timing.

TECH SUPPORT

support@steadybrand.com

EMAIL

greg@steadybrand.com